

CD Changer Operation



Drivers wanted. 

Mix Mode

Pressing the Mix button (all CD changer controls are on the radio) causes the tracks from the selected CD to be played in random order. Optionally, all the tracks on all CDs in the changer (if so equipped) can be played in random order as well.

The factory setting is only for the tracks on the selected CD to be played in random order in Mix Mode. However, you can program your system to play all the CDs in the changer in random order by following these steps:

1. Hold down the SCAN button for more than two seconds. You'll hear an audible signal and "SET ON VOL" will appear in the display.
2. Briefly press the right side of the TUNING button (">"). "SET CD MIX" will appear in the display. The number following this display indicates which Mix Mode is currently selected.

"1" = Mix Mode for a selected CD only (factory setting).

"6" = Mix Mode for all CDs in the changer.
3. Turn the rotary knob to select the mode you wish to use (clockwise for "6" or counterclockwise for "1").
4. Press the SCAN button again for more than two seconds to confirm your new setting. If you are in CD mode, change briefly to a different mode then back to CD in order to activate the new settings.

NOTE: The new settings will not be saved unless it is confirmed by pressing the SCAN button for 2 or more seconds.

Operating Tips

- ✓ Some non-commercially made CDs may not work in your system. These are the kind of CDs that can be made at home on a PC. If normal music CDs function in your system, the problem is not in the audio system.
- ✓ Never clean your CD changer with commercially available liquid cleaning systems. These can seriously damage your changer by attacking rubber components within the unit.